

# Foot Switches

## Standard Momentary Uncovered

Three basic enclosures of the same length and height with different width dimensions for one (F1), two (F2) and three (F3) pedals.



### Ordering Instructions for standard foot switches

#### Single pedal foot switch F1

Article number	Designation	Switching contacts
<b>Snap-action</b>		
		Pedal 1
6061300011	F1-SU1Z	1NC / 1NO
6061400061	F1-SU2Z	2NC / 2NO
<b>Slow-action</b>		
		Pedal 1
6061100005	F1-U1Z	1NC / 1NO
6061200003	F1-U2Z	2NC / 2NO

#### Two pedal foot switch F2

Article number	Designation	Switching contacts
<b>Snap-action</b>		
		Pedal 1 (l.)    Pedal 2 (r.)
6062330021	F2-SU1Z/SU1Z	1NC / 1NO    1NC / 1NO
6062440065	F2-SU2Z/SU2Z	2NC / 2NO    2NC / 2NO
<b>Slow-action</b>		
		Pedal 1 (l.)    Pedal 2 (r.)
6062110013	F2-U1Z/U1Z	1NC / 1NO    1NC / 1NO
6062220015	F2-U2Z/U2Z	2NC / 2NO    2NC / 2NO

#### Three pedal foot switch F3

Article number	Designation	Switching contacts
<b>Snap-action</b>		
		Pedal 1 (l.)    Pedal 2 (m.)    Pedal 3 (r.)
6163444577	F3-SU2Z/SU2Z/SU2Z	2NC / 2NO    2NC / 2NO    2NC / 2NO
<b>Slow-action</b>		
		Pedal 1 (l.)    Pedal 2 (m.)    Pedal 3 (r.)
6063111025	F3-U1Z/U1Z/U1Z	1NC / 1NO    1NC / 1NO    1NC / 1NO