

Foot Switches

Standard Momentary Uncovered

Three basic enclosures of the same length and height with different width dimensions for one (F1), two (F2) and three (F3) pedals.



Ordering Instructions for standard foot switches

Single pedal foot switch F1		
Article number	Designation	Switching contacts
Snap-action		
		Pedal 1
6061300011	F1-SU1Z	1NC / 1NO
6061400061	F1-SU2Z	2NC / 2NO
Slow-action		
		Pedal 1
6061100005	F1-U1Z	1NC / 1NO
6061200003	F1-U2Z	2NC / 2NO

Two pedal foot switch F2			
Article number	Designation	Switching contacts	
Snap-action			
		Pedal 1 (l.)	Pedal 2 (r.)
6062330021	F2-SU1Z/SU1Z	1NC / 1NO	1NC / 1NO
6062440065	F2-SU2Z/SU2Z	2NC / 2NO	2NC / 2NO
Slow-action			
		Pedal 1 (l.)	Pedal 2 (r.)
6062110013	F2-U1Z/U1Z	1NC / 1NO	1NC / 1NO
6062220015	F2-U2Z/U2Z	2NC / 2NO	2NC / 2NO

Three pedal foot switch F3				
Article number	Designation	Switching contacts		
Snap-action				
		Pedal 1 (l.)	Pedal 2 (m.)	Pedal 3 (r.)
6163444577	F3-SU2Z/SU2Z/SU2Z	2NC / 2NO	2NC / 2NO	2NC / 2NO
Slow-action				
		Pedal 1 (l.)	Pedal 2 (m.)	Pedal 3 (r.)
6063111025	F3-U1Z/U1Z/U1Z	1NC / 1NO	1NC / 1NO	1NC / 1NO